







SNIJDERS CARE manufactures and supplies internal transport systems. In addition to the range of standard products covered in this brochure, we can meet custom requirements in size and finish, and develop fully customised solutions for new or existing departments.

Our unchanging priority is to deliver the best possible end product based on the user's experience and our knowledge of the market.

### CONTENTS

**ACCESSORIES** 

## PAGE

14

STAINLESS STEEL WASTE COLLECTORS, WITH OR WITHOUT INTEGRATED PUSH HANDLE

• 1-RING WASTE COLLECTORS	4
2-RING WASTE COLLECTORS	5
• 3-RING WASTE COLLECTORS	6
4-RING WASTE COLLECTORS	7
'DROPPY' WASTE COLLECTORS	8

**ICONS** 

RVS Stainless steel frame

Swivel castors

Donut bumpers

Soft-close lid

Optional lid colour

Soot control

Push handle

Linkable

<sup>\*</sup>Specifications are subject to change.

# STAINLESS STEEL WASTE COLLECTORS WITH OR WITHOUT INTEGRATED PUSH HANDLE

For the collection of waste, our mobile waste collectors come in different sizes and designs to meet every requirement. Standard on all models:

- stainless steel construction Ø 22 mm tube (304)
- all joints are welded around for stability and optimum hygiene
- rectangular collectors include the Care clamping ring for waste bags of size approx.: 600 x 1000 mm (measured flat)
- the Care clamping ring securely mounts a wide variety of bag types. Mounting Fold the ring down, hang the bag through it, and fold ring's underside up. Removal Simply fold the underside of the ring back down.
- integrated lid(s), (hygienic/without grip) with hinge including damping and foot pedal (colour choice of the lid: white, green, blue, red, yellow, grey, black or brown)
- the lower frame features 3-tube reinforcement, whether covered with a stainless steel bottom shelf or not
- mounted on four swivel castors  $\emptyset$  75mm, with grey rubber tyres.

#### Options:

- 4 standard casters, 2 with brake
- 4 stainless steel casters
- 4 stainless steel casters, 2 with brakes
- antistatic casters
- stainless steel hook(s).

#### WC1CDF



## 1-RING WASTE COLLECTOR WITHOUT PUSH HANDLE

Tubular stainless steel frame, 22 mm (304). Standard Care clamping ring. Includes lid (hygienic/without grip) with hinge, including damping and foot control.

When using the foot control, the collector cannot roll away. Choice of lid colour (see page 14).

ORDER NO.	WIDTH X DEPTH X HEIGHT
WC1CDF	410 X 510 X 965 MM



Detail of stainless steel tube with round weld.



Detail of hook.





WCH1CDF

## 1-RING WASTE COLLECTOR WITH PUSH HANDLE

Tubular stainless steel frame, 22 mm (304). Lower frame covered with stainless steel bottom platform. Includes stainless steel hook and donut bumpers at the corners. Standard Care clamping ring. Includes lid (hygienic/without grip) with hinge, including damping and foot control. When using the foot control, the collector cannot roll away. Choice of lid colour (see page 14).

ORDER NO.	WIDTH X DEPTH X HEIGHT
WCH1CDF	490 X 510 X 965 MM





WC2CDF

## 2-RING WASTE COLLECTOR WITHOUT PUSH HANDLE

Tubular stainless steel frame, 22 mm (304).

Standard Care clamping rings. Includes lid (hygienic/without grip)

with hinge, including damping and foot control.

When using the foot control, the collector cannot roll away.

Choice of lid colour (see page 14).

ORDER NO.	WIDTH X DEPTH X HEIGHT
WC2CDF	660 X 510 X 965 MM






## 2-RING WASTE COLLECTOR WITH PUSH HANDLE

Tubular stainless steel frame, 22 mm (304). Lower frame, covered with stainless steel bottom platform. Includes 2 stainless steel hooks and donut bumpers at the corners. Standard Care clamping rings. Includes lid (hygienic/without grip) with hinge, including damping and foot control. When using the foot control, the collector cannot roll away. Choice of lid colour (see page 14).

ORDER NO.	WIDTH X DEPTH X HEIGHT
WCH2CDF	750 X 510 X 965 MM







## 3-RING WASTE COLLECTOR WITHOUT PUSH HANDLE

Tubular stainless steel frame, 22 mm (304).

Standard Care clamping rings. Includes lid (hygienic/without grip) with hinge, including damping and foot control.

When using the foot control, the collector cannot roll away.

Choice of lid colour (see page 14).


WC3CDF WIDTH X DEPTH X HEIGHT



WCH2CDF

1420 X 510 X 965 MM



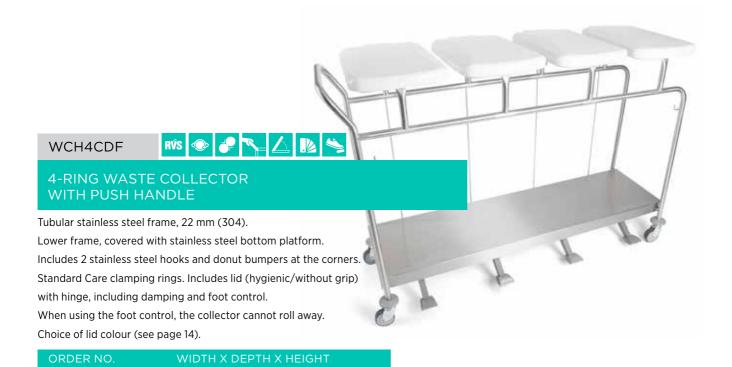

The 'Droppy' waste collectors are specially constructed for the airtight collection of waste/incontinence material. The bags can be exchanged easily and quickly.

## 'DROPPY' WASTE COLLECTORS

#### Standard on all models:

- stainless steel construction  $\emptyset$  22 mm tube (304)
- · all joints are welded around for stability and optimum hygiene
- double-hinged folding clasp at the top
- opening and closing by means of a foot pedal mechanism, partially coated with plastic
- a removable stainless steel platform on the lower frame
- donut bumpers on the corners.

#### On some models:

- includes braking mechanism: when opening, the 'Droppy' immediately blocks and cannot roll away
- includes stainless steel hook.

#### Options:

- stainless steel casters
- antistatic casters
- clip clamps set (2 pcs.) for both sides of the folding clasps (WDFC)
- stainless steel handgrip Ø 22 mm tube (304) –add 'H' to the model number (this option not available for WD10, WD12, WD20 and WD22).



#### 'DROPPY' (MOUNTABLE ON 'SNIJDERS CARE' 2-RING WARD CARTS)

Tubular stainless steel tube frame, Ø 22 mm (304). A double-hinged folding clasp on top for plastic waste bags of size 500 x 800 mm (measured flat), capacity 40 litres. Includes braking mechanism. Mounted on 2 swivel castors Ø 75 mm, with grey rubber tyres. Donut bumpers on 2 corners.

ORDER NO.	WIDTH X DEPTH X HEIGHT
WD10	530 X 430 X 825 MM











WD11

#### 'DROPPY'

Tubular stainless steel tube frame, Ø 22 mm (304). A double-hinged folding clasp on top for plastic waste bags of size 500 x 800 mm (measured flat), capacity 40 litres. Mounted on 4 swivel castors Ø 75 mm, with grey rubber tyres, 2 with brakes. Donut bumpers on 2 corners.

ORDER NO.	WIDTH X DEPTH X HEIGHT
WD11	530 X 490 X 825 MM





#### 'DROPPY' WALL MODEL

Tubular stainless steel tube frame, Ø 22 mm (304). A double-hinged folding clasp on top for plastic waste bags of size 500 x 800 mm (measured flat), capacity 40 litres. Opening and closing can be done either via the stainless steel handgrip or by means of the foot pedal mechanism.

ORDER NO.	WIDTH X DEPTH X HEIGHT
WD12	530 X 400 X 770 MM

WD13









#### 'DROPPY'

Tubular stainless steel tube frame, Ø 22 mm (304). A double-hinged folding clasp on top for plastic waste bags of size 500 x 800 mm (measured flat), capacity 40 litres. Includes braking mechanism. Mounted on 4 swivel castors Ø 75 mm, with grey rubber tyres. Donut bumpers at the corners.

ORDER NO.	WIDTH X DEPTH X HEIGHT
WD13	530 X 490 X 825 MM











#### 'DROPPY' WITH 2 FEET

Tubular stainless steel tube frame, Ø 22 mm (304). A double-hinged folding clasp on top for plastic waste bags of size 500 x 800 mm (measured flat), capacity 40 litres. 2 feet in front, 2 swivel castors in back, Ø 75 mm, with grey rubber tyres including donut bumpers.

ORDER NO.	WIDTH X DEPTH X HEIGHT
WD14	530 X 490 X 825 MM













WD20

#### 'DROPPY' (MOUNTABLE ON 'SNIJDERS CARE' 2-RING WARD CARTS)

Tubular stainless steel tube frame, Ø 22 mm (304). A double-hinged folding clasp on top for plastic waste bags of size 575 x 1000 mm (measured flat), capacity 70 litres. Includes braking mechanism. Mounted on 2 swivel castors Ø 75 mm, with grey rubber tyres. Donut bumpers at the 2 corners.

ORDER NO.	WIDTH X DEPTH X HEIGHT
WD20	585 X 430 X 980 MM









#### 'DROPPY'

Tubular stainless steel tube frame, Ø 22 mm (304). A double-hinged folding clasp on top for plastic waste bags of size 575 x 1000 mm (measured flat), capacity 70 litres. Mounted on 4 swivel castors, Ø 75 mm, with grey rubber tyres, 2 with brakes. Donut bumpers at the corners.

ORDER NO.	WIDTH X DEPTH X HEIGHT
WD21	585 X 490 X 980 MM







#### 'DROPPY' WALL MODEL

Tubular stainless steel tube frame, Ø 22 mm (304). A double-hinged folding clasp on top for plastic waste bags of size 575 x 1000 mm (measured flat), capacity 70 litres. Opening and closing can be done either via the stainless steel handgrip or by means of the foot pedal mechanism.

ORDER NO.	WIDTH X DEPTH X HEIGHT
WD22	585 X 400 X 910 MM











#### 'DROPPY'

Tubular stainless steel tube frame, Ø 22 mm (304). A double-hinged folding clasp on top for plastic waste bags of size 575 x 1000 mm (measured flat), capacity 70 litres. Includes braking mechanism. Mounted on 4 swivel castors Ø 75 mm, with grey rubber tyres. Donut bumpers at the corners.

ORDER NO.	WIDTH X DEPTH X HEIGHT
WD23	585 X 490 X 980 MM













WD24

#### 'DROPPY' WITH 2 FEET

Tubular stainless steel tube frame, Ø 22 mm (304). At the top a double-hinged folding clasp, for plastic waste bags of size 575 x 1000 mm measured flat, capacity 70 litres. 2 feet in front, 2 swivel castors in back, Ø 75 mm, with grey rubber tyres including donut bumpers.

ORDER NO.	WIDTH X DEPTH X HEIGHT
WD24	585 X 490 X 980 MM

## ACCESSORIES

#### LWR

#### CARE RING

This Care ring securely mounts a wide variety of bag types.

Fold the ring down, hang the bag through the ring, and fold up the underside of the ring.

To remove the bag, simply fold the underside of the ring back down.  $\label{eq:control}$ 

#### ORDER NO.

LWR









#### RECTANGULAR PLASTIC LIDS

Order no. of lid: CW1 - CG2 - CB3 - CR4 - CY5 - CG6 - CB7 - CB8

Order no. of lid with hinge including damping: CDW1 - CDG2 - CDB3 - CDR4 - CDY5 - CDG6 - CDB7 - CDB8



#### HINGE FOR COVER + D

Hinge including damping for plastic lid.



#### FOOT PEDAL + F

Foot pedal.



#### **CLIP CLAMPS WDFC**

(2pcs/set) for both sides of the folding clasps.

